

XK315A1-8

1. **LO OK HI** with the function of verifying scale.

2. LIGHT INDICATION:

〔LO〕: The displayed value is lower than the gate level at b point.

〔HI〕: The displayed value is higher than the gate level at c point.

〔OK〕: The displayed value is between the gate levels at b point and gate level at c point.


3. THE PROCEDURES TO SET THE FIXED VALUE:

3.1. SETTING THE FIXED VALUE:

You can get two fixed values by setting four points: a, b, c, d

Step	Operation	Display	Notes
1	Press 【↑】 【on】	〔0〕—〔9〕 〔 0〕	When it is off, keep pressing 【↑】 , then press 【on】 key.
2	Press 【↑】	〔a. 0〕	Set the starting point for the first fixed value by 【→】【↑】
3	Press 【*】	〔b. 0〕	Set the ending point for the first fixed value by 【→】【↑】
4	Press 【*】	〔c. 0〕	Set the starting point for the second fixed value by 【→】 【↑】
5	Press 【*】	〔d. 0〕	Set the ending point for the second fixed value by 【→】 【↑】
6	Press 【off】		Turn off

3.2. TIME SEQUENCE FOR OPERATION (FOR CHECK WEIGHER)

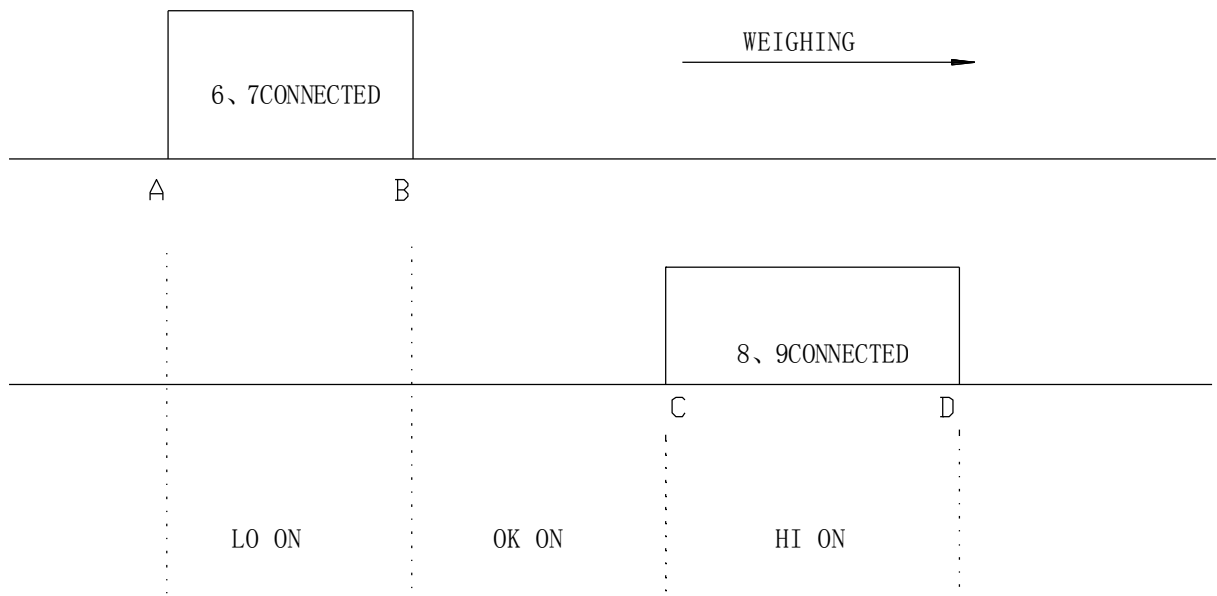

2008-1-22